

582/583/5831

Product Manual

© Copyright Eurotherm Drives Limited 2000

All rights strictly reserved. No part of this document may be stored in a retrieval system, or transmitted in any form or by any means to persons not employed by a Eurotherm group company without written permission from Eurotherm Drives Ltd.

Although every effort has been taken to ensure the accuracy of this document it may be necessary, without notice, to make amendments or correct omissions. Eurotherm Drives cannot accept responsibility for damage, injury, or expenses resulting therefrom.

Printed in England HA385113 Issue 7

WARRANTY

Eurotherm Drives warrants the goods against defects in design, materials and workmanship for the period of 12 months from the date of delivery on the terms detailed in Eurotherm Drives Standard Conditions of Sale IA058393C.

Eurotherm Drives reserves the right to change the content and product specification without notice.

© COPYRIGHT in this document is reserved to Eurotherm Drives Ltd.

INTENDED USERS

This manual is to be made available to all persons who are required to configure, install or service the equipment described herein or any other associated operation.



WARNING

This equipment contains hazardous voltages and hazardous rotating mechanical components.

Loss of life, severe personal injury or property damage can result if instructions contained in this manual are not followed.



Only qualified personnel should work on this equipment, and only after becoming familiar with all safety instructions regarding installation, operation and maintenance procedures contained in this manual. The successful and safe operation of this equipment is dependent on proper handling, installation, operation and maintenance of the equipment.

582/583/5831

Contents

Chapter 1 Ge	eneral Description	1-1
Chapter 2 Te	chnical Details	2-1
	ELECTRICAL SPECIFICATIONS	2-1
	ENVIRONMENTAL	2-2
	MECHANICAL	2-2
Chapter 3 Ou	utline Drawings	3-1
Chapter 4 Pr	oduct Code	4-1
Chapter 5 Te	rminal Descriptions	5-1
	TERMINAL DESCRIPTIONS 582/583	5-1
	TERMINAL DESCRIPTIONS 5831	5-2
	POWER TERMINALS	5-3
	CUSTOMER ADJUSTMENTS	5-4
	OPTION SWITCHES	5-5
Chapter 6 Diagnostics		6-1
	582/583 BLOCK DIAGRAM HH057838	
	5831 BLOCK DIAGRAM HH385004	
	582 BASIC CONNECTION WITH BRAKE UNIT HJ057820	
	583 BASIC CONNECTION WITH BRAKE UNIT HJ058055	
	5831 BASIC CONNECTION HJ385002	
	MOMENTARY START/STOP HJ385167	
MOMENTARY START/STOP HJ385167 Chapter 7 Installation Information		
	MOTOR	7-1
	WIRING	7-1
	SPECIAL CONSIDERATIONS FOR UL COMPLIANCE	7-2
Chapter 8 Bo	asic Setting Up Procedure	8-1
	CAUTION	8-1
	PREPARATION	8-1
	POWER ON	8-2
	APPLICATIONS NOTES AND HINTS	8-3
Chapter 9 Ti	ouble Shooting	9-1
Chapter 10 (User Instructions	10-1
	CURRENT LOOP AND ZERO SPEED OPTION CARD	10-1
Chapter 11 I	EMC and the 'CE' Mark	11-1

ISS.	MODIFICATION	ECN No.	DATE	DRAWN	CHK'D
1	Initial Issue of HA385113	6309	22.8.91		GDR
2	Corrections: Page 9 Block 3 5831 now "1"	7148	1.12.91		GDR
	No Op-station "2" Including Op-station.				
	Page 2 Max. Current Supply changed 9.5 to 8 and 5.5 to 5.	5			
	Page 3 Gland Plate force fit into "base".				
	Page 30 Revised Circuit Diagram.				
3	Replaced SSD name and address with Eurotherm Driv	es. 8087	26.7.93		GDR
	Add UL special considerations page 23.	8092			
4	Added to page 7.2 number 5.	10399	2.10.95	FEP	CC
	Rewritten from Manuscript to Microsoft Word 6.0				
5	Added section 11 EMC and the 'CE' Mark.	10137	28.11.95	FEP	MP
6	Page 5-6 corrected 0.75 to 1.5kW on 5831 1.5kW build drive.	10699	17.01.96	FEP	RBr
7	Page 11-1 added sentence "as confirmed chapter.				
	Page 11-2 added new chart.				
	Page 11-9 added "Generic Standard" columns and "* Achieved cable"	:			
	Page 11-11 added Manufacturers EMC Declaration.	10856	29.04.96	FEP	
FIRST USED ON MO		MODIFICATION	N RECORD		
		582/583/5831 Product Manual			
		DRAWING NUMBER			SHT. 1
E EUROTHERM DRIVES		ZZ385113			OF 1

SALES AND SERVICE

Eurotherm Drives is a division of Eurotherm PLC, and provides sales and service capability world-wide through Eurotherm Drives Companies, Eurotherm Group Companies and Agents.

Head Office

Eurotherm Drives Limited New Courtwick Lane Littlehampton West Sussex. BN17 7PD

Tel: 01903 721311 Fax: 01903 723938